


Training



HOME CARD

Using the LaserWriter II
Product Family

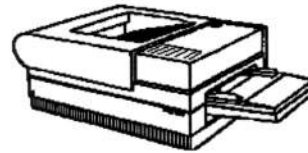

Introduction

Reference

Exercise

QUIT

HELP


TONER CARTRIDGE



Removing the Cartridge

Cleaning


Installing the Cartridge

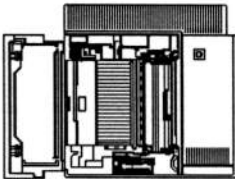

PRINT

GO BACK

Removing the Cartridge

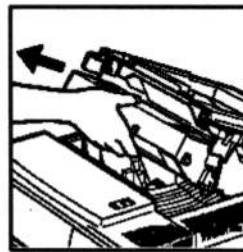


1. Press the release button on the top of the printer.
2. Lift the top up and to the left as far as it will go.
3. Carefully slide the toner cartridge out of the printer.

PRINT

GO BACK

Installing the Cartridge

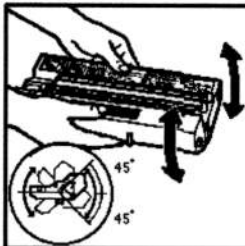


1. Remove the new cartridge from its metallic bag, holding it by the indentation at its wide end (the end without the writing).
2. Hold the cartridge horizontally and slowly rock it 45 degrees back and forth about five times to distribute the toner powder.

PRINT

GO BACK



Installing the Cartridge

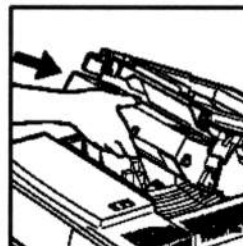

3. Insert the cartridge into the slot on the underside of the raised upper section of the printer.

Carefully slide it in as far as it will go. Follow the direction arrows on the cassette, and be sure that it is seated firmly.

PRINT

GO BACK



Installing the Cartridge



4. Holding the cartridge in place, flex the tab gently but firmly until it breaks loose.


Don't tear it completely away; you'll need it to pull out the sealing tape.

PRINT

GO BACK



Installing the Cartridge

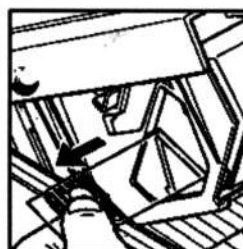

5. Pull the tab outward until the tape is completely removed.

If the tab does come off, grasp the tape itself and pull out.


PRINT

GO BACK



Ready/In Use Indicator

Green

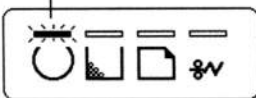

ON steady when the printer is ready to print.

FLASHES when the controller is warming up, printing the test page or processing data for a print job.

OFF when the printer is not ready to print because of an error condition, or the cover is open.

PRINT

Go Back

Low Toner Level Indicator

Orange



ON steady when printer status indicates that toner is low.


FLASHES when toner cartridge is installed incorrectly; OFF otherwise.

PRINT

Go Back

Paper Out Indicator

Red

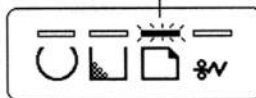

ON steady when printer status indicates paper out in CASSETTE FEED mode.

FLASHES when the printer status indicates paper out in MANUAL FEED mode.

FLASHES when printer requires service; OFF otherwise.

PRINT

Go Back

Paper Jam Indicator

Red



ON steady when the printer status indicates a paper jam.

FLASHES when the printer requires service; OFF otherwise.

PRINT

Go Back